


Baterie Duracell Sony NP-FV70, 7,2V (7,4V) - 1640mAh

Kód (DR9706B)

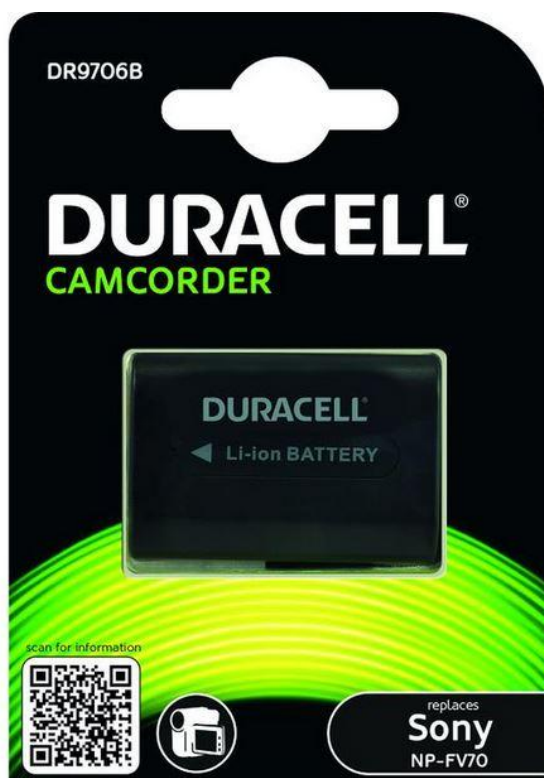

Kompatibilita dle výrobního čísla:

NP-FV50, NP-FV70, NPFV70.CE

Kompatibilita dle modelu videokamery:

SONY

DCR-DVD105E,DCR-DVD106E,DCR-DVD108E, DCR-DVD109E,DCR-DVD110E,DCR-DVD115E, DCR-DVD202E,DCR-DVD203E,DCR-DVD205E, DCR-DVD304E,DCR-DVD305E,DCR-DVD306E, DCR-DVD308E,DCR-DVD310E,DCR-DVD403E, DCR-DVD404E,DCR-DVD405E,DCR-DVD406E, DCR-DVD408E,DCR-DVD410E,DCR-DVD450E, DCR-DVD505E,DCR-DVD506E,DCR-DVD508E, DCR-DVD650E,DCR-DVD850E,DCR-DVD92E, DCR-HC16E, DCR-HC17E,DCR-HC18E, DCR-HC19E, DCR-HC20E,DCR-HC22E, DCR-HC23E, DCR-HC24E,DCR-HC26E, DCR-HC27E, DCR-HC28E,DCR-HC30E, DCR-HC32E, DCR-HC35E,DCR-HC36E, DCR-HC37E, DCR-HC38E,DCR-HC39E, DCR-HC40E, DCR-HC42E,DCR-HC44E, DCR-HC45E, DCR-HC46E,DCR-HC47E, DCR-HC48E, DCR-HC51E,DCR-HC53E, DCR-HC62E, DCR-HC85E,DCR-HC94E, DCR-HC96E, DCR-SR100E,DCR-SR190E, DCR-SR200E,DCR-SR290E,DCR-SR300E,

DCR-SR30E,DCR-SR32E,DCR-SR33E, DCR-SR35E,DCR-SR36E,DCR-SR37E, DCR-SR38E,DCR-SR40E,DCR-SR42E, DCR-SR50E,DCR-SR52E,DCR-SR55E, DCR-SR57E,DCR-SR58E,DCR-SR60E, DCR-SR62E,DCR-SR68/R,DCR-SR70E, DCR-SR72E,DCR-SR75E,DCR-SR77E, DCR-SR78E,DCR-SR80E,DCR-SR82E, DCR-SR87,DCR-SR88,DCR-SR90E, DCR-SX30E, DCR-SX31E,DCR-SX33E, DCR-SX34E, DCR-SX41,DCR-SX44, DCR-SX50E, DCR-SX53E,DCR-SX63, DCR-SX73E, DCR-SX83,HDR-CX105VE, HDR-CX106VE,HDR-CX110, HDR-CX110/L HDR-CX110/R, HDR-CX115E, HDR-CX115VE, HDR-CX116E,HDR-CX116VE,HDR-CX11VE, HDR-CX120, HDR-CX150, HDR-CX155E, HDR-CX155VE,HDR-CX170,HDR-CX300 HDR-CX305VE,HDR-CX350,HDR-CX350VE, HDR-CX370V, HDR-CX500V,HDR-CX505VE, HDR-CX520V,HDR-CX520VE,HDR-CX550, HDR-CX550V,HDR-CX550VE,HDR-CX6E,K HDR-HC3E,HDR-HC5E,HDR-HC7E, HDR-HC9,HDR-HC9E,HDR-SR10E, HDR-SR11E, HDR-SR12E, HDR-SR5E, HDR-SR7E,HDR-SR8E,HDR-UX19E, HDR-UX3E,HDR-UX5E,HDR-UX7E, HDR-UX9E,HDR-XR100, HDR-XR105E, HDR-XR106E,HDR-XR150, HDR-XR155E, HDR-XR200VE,HDR-XR350,HDR-XR350V HDR-XR350VE,HDR-XR500V,HDR-XR500VE, HDR-XR5200VE,HDR-XR520V,HDR-XR550, HDR-XR550V,HDR-XR550VE, NEX-VG10, NEX-VG10E, NEX-VG20E, NEX-VG20EH