


Baterie Duracell Sony NP-F330, 7,2V (7,4V) - 2200mAh

Kód (DR5)

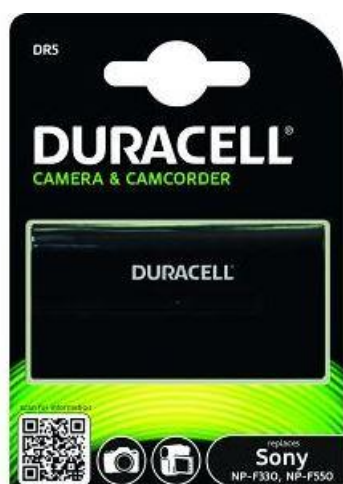

Kompatibilita dle výrobního čísla:

NP-F330, NP-F530, NP-F550, NP-F570, VISO-550B-082N

Kompatibilita dle modelu - fotoaparáty:

SONY

Cyber-shot DSC-CD250, Cyber-shot DSC-CD400, Cyber-shot DSC-D700, Cyber-shot DSC-D770, MVC-CD1000, MVC-FD100, MVC-FD200, MVC-FD5, MVC-FD51, MVC-FD7, MVC-FD73, MVC-FD73K, MVC-FD75, MVC-FD81, MVC-FD83, MVC-FD83K, MVC-FD85, MVC-FD87, MVC-FD88K, MVC-FD90, MVC-FD91, MVC-FD92, MVC-FD95, MVC-FD97

Kompatibilita dle modelu - videokamery:

SONY

CCD-RV100, CCD-RV200, CCD-SC5, CCD-SC5/E, CCD-SC55, CCD-SC55E, CCD-SC6, CCD-SC65, CCD-SC7 , CCD-SC8/E, CCD-SC9, CCD-TRT97, CCD-TRV101, CCD-TRV15, CCD-TRV16, CCD-TRV16E, CCD-TRV201, CCD-TRV215, CCD-TRV25, CCD-TRV27E, CCD-TRV3000, CCD-TRV315, CCD-TRV35, CCD-TRV36, CCD-TRV37, CCD-TRV37E, CCD-TRV4, CCD-TRV41, CCD-TRV43, CCD-TRV45K, CCD-TRV46, CCD-TRV46E, CCD-TRV47, CCD-TRV47E, CCD-TRV48, CCD-TRV48E, CCD-TRV49, CCD-TRV51, CCD-TRV517, CCD-TRV54E, CCD-TRV56E, CCD-TRV57, CCD-TRV57E, CCD-TRV58, CCD-TRV59, CCD-TRV59E, CCD-TRV615, CCD-TRV62, CCD-TRV63, CCD-TRV65, CCD-TRV66, CCD-TRV66E, CCD-TRV66K, CCD-TRV67, CCD-TRV67E, CCD-TRV68, CCD-TRV71, CCD-TRV715, CCD-TRV716, CCD-TRV72, CCD-TRV720, CCD-TRV75, CCD-TRV78, CCD-TRV78E, CCD-TRV80PK, CCD-TRV81, CCD-TRV815, CCD-TRV82, CCD-TRV85, CCD-TRV85K, CCD-TRV86PK, CCD-TRV87, CCD-TRV87E, CCD-TRV88, CCD-TRV90, CCD-TRV91, CCD-TRV92, CCD-TRV93, CCD-TRV930, CCD-TRV94E, CCD-TRV940, CCD-TRV95, CCD-TRV95E, CCD-TRV95K, CCD-TRV98, CCD-TRV98E, CCD-TRV99, CCD-TR1, CCD-TR1E, CCD-TR11, CCD-TR1100E, CCD-TR12, CCD-TR18, CCD-TR18E, CCD-TR2, CCD-TR200, CCD-TR205, CCD-TR215, CCD-TR2200E, CCD-TR2300, CCD-TR2300E, CCD-TR280PK, CCD-TR290PK, CCD-TR3, CCD-TR300, CCD-TR3000, CCD-TR3000E, CCD-TR3100E, CCD-TR311E, CCD-TR315, CCD-TR315E, CCD-TR317, CCD-TR3200E, CCD-TR3300, CCD-TR3300E, CCD-TR411E, CCD-TR412E, CCD-TR413, CCD-TR414, CCD-TR415E, CCD-TR416, CCD-TR417, CCD-TR417E, CCD-TR425E, CCD-TR427, CCD-TR427E, CCD-TR500, CCD-TR511E, CCD-TR512E, CCD-TR515E, CCD-TR516, CCD-TR516E, CCD-TR517, CCD-TR555, CCD-TR57, CCD-TR610, CCD-TR617, CCD-TR617E, CCD-TR618, CCD-TR618E, CCD-TR640E, CCD-TR67, CCD-TR710, CCD-TR713E, CCD-TR716, CCD-TR717, CCD-TR717E, CCD-TR718, CCD-TR718E, CCD-TR728, CCD-TR728E, CCD-TR730E, CCD-TR76, CCD-TR760E, CCD-TR810E, CCD-TR818, CCD-TR840E, CCD-TR845E, CCD-TR87, CCD-TR910, CCD-TR913E, CCD-TR917, CCD-TR918E, CCD-TR930, CCD-TR940, CCD-TR950E, CCD-TR97, CRX10U(CD-RW), CVX-V18NS(noční vidění), CVX-V18NSP(noční vidění), DCM-M1, DCR-SC100, DCR-TRU47E, DCR-TRV103, DCR-TRV110, DCR-TRV110E, DCR-TRV110K, DCR-TRV120, DCR-TRV120E, DCR-TRV125E, DCR-TRV130, DCR-TRV130E, DCR-TRV203, DCR-TRV210, DCR-TRV210E, DCR-TRV220K, DCR-TRV310, DCR-TRV310E, DCR-TRV310K, DCR-TRV315, DCR-TRV320, DCR-TRV320E, DCR-TRV420E, DCR-TRV49E, DCR-TRV5, DCR-TRV510 , DCR-TRV520, DCR-TRV520E, DCR-TRV525, DCR-TRV58E, DCR-TRV620E, DCR-TRV620K, DCR-TRV7, DCR-TRV720, DCR-TRV720E, DCR-TRV735K, DCR-TRV820, DCR-TRV820E, DCR-TRV820K, DCR-TRV9, DCR-TRV900, DCR-TRV900E, DCR-TRV935K, DCR-TR7 Series, DCR-TR7000, DCR-TR7000E, DCR-TR7100E, DCR-TR8000E, DCR-TR8100E, DCR-TV900, DCR-TV900E, DCR-VX2000, DCR-VX2000E, DCR-VX2100, DCR-VX2100E, DCR-VX9 Series, DCR-VX9000, DSR-PD100, DSR-PD100A, DSR-

PD100AP, DSR-V10P(Video Walkman),DSR-V10(Video Walkman),DSR-200,D-V500(DVD Player), GV-A100(Video Walkman), GV-A500, GV-A500E, GV-A700(Video Walkman), GV-D200(Video Walkman), GV-D300(Vide, Walkman), GV-D800(Video Walkman), GV-D900(Video Walkman), HDR-FX1, HVL-20DW2(Video Light), HVR-M10C(videorekordér), HVR-M10E(videorekordér), HVR-M10N(videorekordér) , HVR-M10P(videorekordér), HVR-M10U(videorekordér), HVR-V1U, HVR-Z1C, HVR-Z1J, HVR-Z1U, MPK-DVF4, MVC-FDR1(Digital Mavica), MVC-FDR1E(Digital Mavica) MVC-FDR3(Digital Mavica), MVC-FDR3E(Digital Mavica), PBD-D50(DVD Player), PBD-V30(DVD Player), PLM-A35(Glasstron), PLM-A55(Glasstron), PLM-100(Glasstron), PLM-50(Glasstron), Q002-HDR1, UPX-2000(tiskárna)

SONY

profi DSR-PD150, DSR-PD150P, DSR-PD170, DSR-PD170P, HDR-FX1E